Smart Films INTERNATIONAL

# Solar Window Film
## Installation Instructions













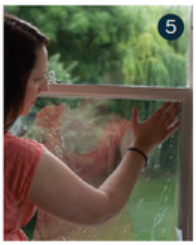






Visit our website for more!

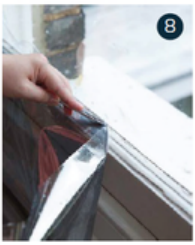Follow us on:

### Before You Begin

Please open your package and check your film carefully. If you find any creases, tears or other defects, please contact us immediately for advice. Do not remove the backing sheet or attempt to install your film if you think it is faulty – we are unable to accept returns or provide refunds if installation has been attempted.

### You Will Need

To complete your installation, you will need: a spray bottle and a few drops of shampoo or dish soap, sharp scissors, a sharp knife or blade, a tape measure and paper towels. You will also require the plastic squeegee which is supplied with your order.

### Prepare Your Window

Fill your spray bottle with water and add a few drops of shampoo or dish soap. A clean window is vital to a successful installation: spray the glass and clean it thoroughly before beginning the installation process.

### Install the Film

1. Measure your window and note down the measurement. Carefully unroll your film onto a clean, flat surface and using the sharp scissors, cut your film to a size slightly larger than your window.
2. Remove the backing sheet slowly and steadily to avoid damage. As you peel, spray the adhesive side of the film with soapy water solution so it does not fold over and stick to itself.
3. Cover the entire surface of your window with soapy water solution. The soapy water solution allows the film to be moved.
4. Apply the adhesive side of the film to the wet glass. The soapy water solution on the film and the glass will allow you to slide it into position.
5. Once in place, spray the outer face of the film with soapy water solution. This reduces friction between the squeegee and the film. Use your squeegee to push water and air bubbles out to the edges of the pane. Start at the top of the pane and work your way downwards.
6. Use your blade to carefully trim the excess film at the edges using the window frame as a guide. Your squeegee also provides a helpful edge to cut against.
7. Once the excess film has been removed, spray the film with the soapy water solution again. Use the squeegee to push any remaining moisture or bubbles to the edge of the window.
8. Use a paper towel to dry the window. Be careful not to lift the film at the edges or corners.